


Bambu Lab Smoke Purifier Quick Start Guide
拓竹烟尘净化器快速入门指南
Bambu Lab 空氣清淨機クイックスタート

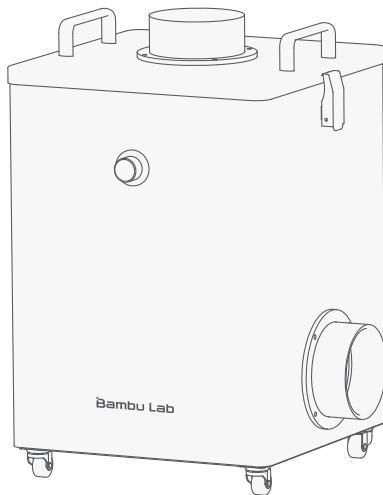

Do not connect to power until the assembly is complete.
请勿在安装完成之前通电。
全ての組立が済ませてから電源を入れてください

Read before use

Items to check before using the device:

- Ensure the device's appearance is intact and undamaged.
- Verify that the power switch is turned off.
- Confirmed the filters are installed and securely placed inside the device.
- The top cover of the device is firmly attached to the body.

Placement requirements:

- Maintain at least 30 cm of clearance on all sides and above the device, ensuring the air intake is unobstructed.
- Do not place any items on the device.

Power requirements:

- Always use the power cable provided with the device.
- Avoid excessive twisting, bending, or pulling of the power cable to prevent wire breakage or exposure, which may pose safety risks.
- Disconnect the power before performing maintenance or moving the device.
- When moving the device, disconnect the power first and do not pulling the power cable to move it.


Notes during use:

- If the device exhibits abnormal noise, odor, overheating, irregular fan rotation, or other abnormal conditions, immediately disconnect the power and stop using the device.
- Do not tilt the device, or lean or sit on it.

Read before use

- The device cannot filter carbon monoxide (CO) or radon (Rn) and should not be used as a safety device during combustion or hazardous chemical incidents.
- When using the device near household gas appliances, such as gas stoves and water heaters, ensure proper ventilation to avoid CO poisoning.
- Do not put liquid, powders, flammable materials, or any foreign objects into the air intake.
- If the filter becomes severely clogged, disconnect the power immediately and stop using the device to avoid shortening its lifespan or causing damage.
- Use official replacement filters to ensure optimal filtration performance when replacing the filter.


Package contents

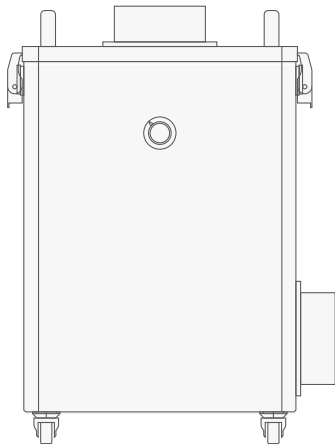

Smoke Purifier



Quick Start Guide

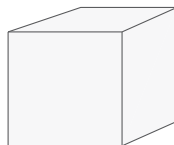


Accessory Box



Spare G4 Filter Cotton

List of items in the accessory box



Φ 100 mm * 2 m
Smoke Ventilation Pipe




Power Cable



Pipe Clamp

Assembly and powering on

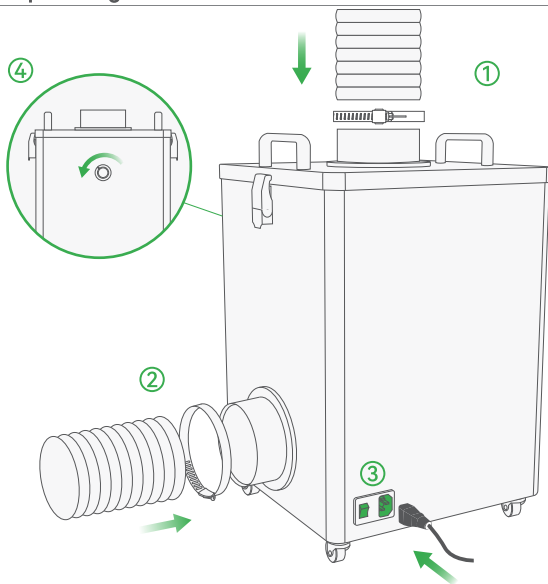

- ① Attach the smoke ventilation pipe from the printer and secure it with the pipe clamp.
- ② Connect the smoke ventilation pipe from the accessory box and secure it with the pipe clamp.
- ③ Plug in the power cable and switch on the power.
- ④ Turn the knob to adjust the airflow to your desired level.

Please note that the knob can only be used to adjust airflow. If you do not need to use the purifier, please use the switch to power it off.

Troubleshooting

Important: Before performing any maintenance, always remove the power cable!

Issue 1: Weak air output, greatly reduced suction, and filter clog alarm triggered.

- **Cause:** Air intake blockage, foreign objects in the pipe, or a saturated filter.
- **Solution:** Turn off the device, remove the top cover, and clear any blockages at the air intake or vent. If the intake and outlet are clear, remove the filter and turn on the device. Normal suction indicates a saturated filter. Replace the G4 filter cotton first, and if the alarm persists, replace the F8 filter or H13 filter.

Issue 2: Device shuts down immediately after powering on.


- **Cause:** Internal airflow blockage or high resistance through the filter, causing excessive starting current.
- **Solution:** Turn off the device, remove the top cover, and check for air intake blockages. If none are found, reduce airflow to the minimum, power on, and then adjust to the desired level.

Issue 3: Power indicator doesn't light up.

- **Cause:** A blown fuse.
- **Solution:** Go to wiki.bambulab.com/en/smoke-purifier/maintenance/replace-fuse for detailed replacement steps.

Replace the filter


①

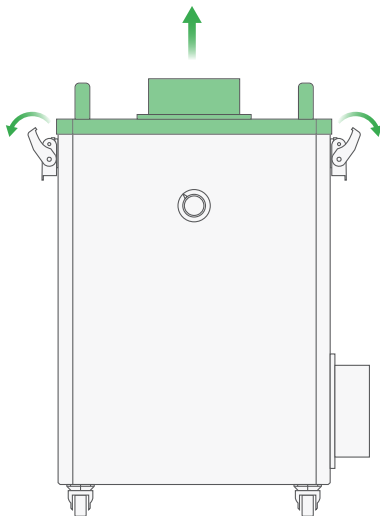

Open the latches and remove the top cover.

Replace the filter

②

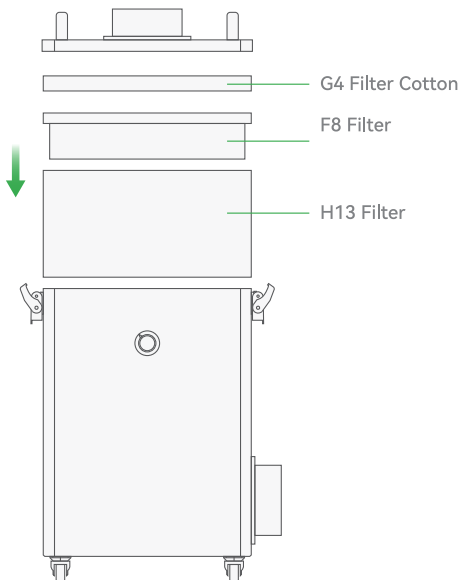


Replace and install the filters following the order shown in the picture.

* Please note that the F8 filter and H13 filter are not included in the package as spares, and must be purchased separately.

Replace the filter

③

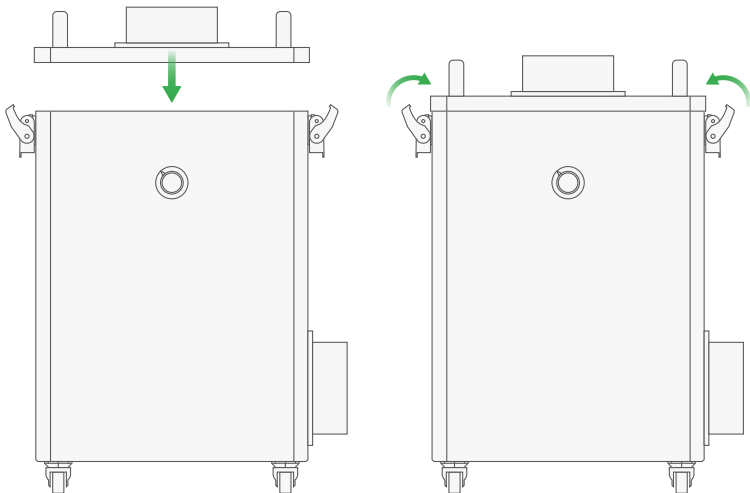

Install the top cover and close the latches.


Specifications

	Item	Specification
Body	Frame	Cold-rolled Steel Plate
	Smoke Ventilation Pipe	Flexible PVC
Filtration Efficiency	Flow	330 m³/h
	Max Negative Pressure	2800 Pa
	Performance	0.3 µm 99.97%
Physical Dimensions	Physical Dimensions (L * W * H)	315 * 315 * 500 mm³
	Net Weight	14.13 kg
	Flange Interface	φ100 mm
Power Requirements	Input Voltage	200 - 240 V, 50 Hz
	Max Power	200 W


Technical Support

If you need technical support, please follow either of the following methods:

Method 1: Get in touch by using the Contact Us button in our Support Center.
bambulab.com/support

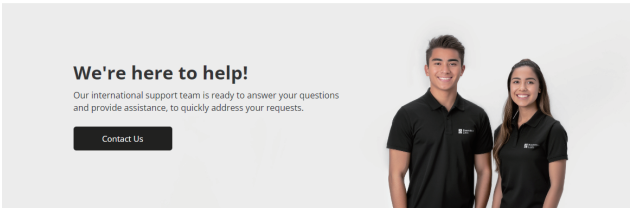

Method 2: Create a support ticket on Bambu Handy, from the Support Center section.

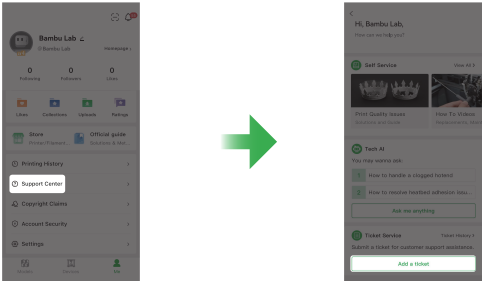

You can also visit the Bambu Lab Wiki for more tutorials and maintenance guidance.
wiki.bambulab.com/home



Bambu Lab
Wiki

注意事项

使用前检查项：

- 确保设备外观完好、无损坏。
- 确保已关闭电源开关。
- 确保滤芯已经安装且平稳放置至设备内部。
- 确保设备顶盖与机身安装牢靠。

放置要求：

- 在设备的四周和上方至少留出 30 cm 间隙，确保进风口畅通无阻。
- 请勿在设备上放置任何物品。

电源要求：

- 请务必使用设备自带的电源线。
- 请勿过度拧捏、弯折或扭转电源线，避免线芯折断或外漏，造成安全风险。
- 在进行维护或者移动设备前，请务必先断开电源。
- 如果需要移动设备，请先断开电源再移动，禁止拉扯电源线来移动设备。


使用时的注意点：

- 如设备出现异响、异味、高温、风扇不规则旋转等异常情况时，请立即断开电源并停止使用。
- 请勿倾斜设备，或者倚靠、坐在设备上。
- 由于设备无法过滤一氧化碳 (CO) 或氡 (Rn)，因此在发生燃烧和危险化学品事故时，不能将设备用作安全设备。
- 设备与家用燃气用具（如燃气灶、燃气热水器等）同时使用时，请注意通风换气，避免一氧化碳 (CO) 中毒。

注意事项

- 请勿从进风口内放入液体、粉末、可燃物或任何异物。
- 过滤芯、过滤棉严重堵塞时，请立即断开电源并停止使用设备，否则会缩短设备的寿命，甚至损坏设备。
- 更换过滤芯、过滤棉时，请使用官方耗材，以确保最佳的过滤效果。


包装清单

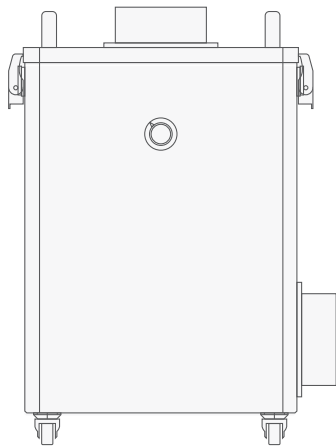

烟尘净化器



快速入门指南

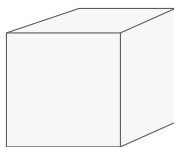


配件盒



备用 G4 过滤棉

配件盒内容清单



Φ 100 mm * 2 m 排烟管




电源线



卡箍

安装和开机

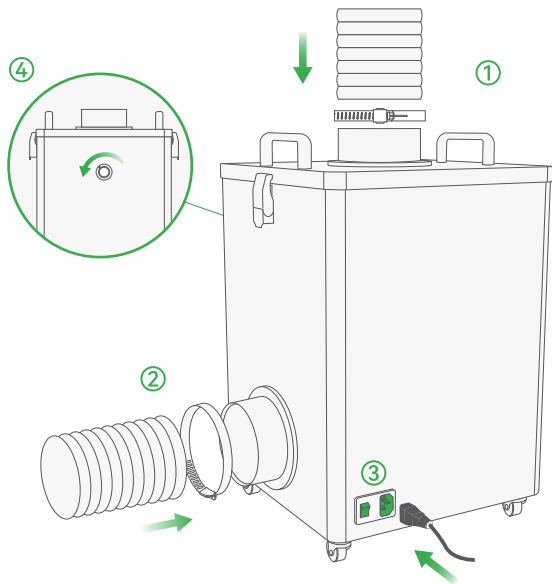

- ① 连接打印机的排烟管，并用卡箍固定。
- ② 连接配件盒中的排烟管，并用卡箍固定。
- ③ 插上电源线，打开电源开关。
- ④ 旋转旋钮，调节至所需风速。

请注意：旋钮仅可调节风速，无法使净化器断电。不使用时，请使用电源开关关闭净化器。

故障处理

重要：在检修设备之前，请务必断开电源！

故障 1：出风量微弱，吸入力大幅降低，滤芯堵塞报警。

- **原因：**进风口堵塞；排烟管内有异物；滤芯达到饱和。
- **解决方式：**关闭电源。取下顶盖，清除进风口或出风口处的异物即可。如果进风口和出风口均未堵塞，取出整个滤芯后打开设备的电源。如果设备吸力正常，说明滤芯达到饱和导致堵塞。首先更换备用 G4 过滤棉。如果更换后依旧报警，则需更换 F8 过滤器或者 H13 过滤器。

故障 2：设备在启动后马上自动关机。


- **原因：**设备内部气流不通，经过滤芯时阻力过大，导致设备启动电流过大。
- **解决方式：**关闭电源。取下顶盖，检查是否有异物堵塞进风口。如果没有堵塞，将风量调到最小后开机，然后调整至合适风量即可。

故障 3：打开电源开关，电源指示灯不亮。

- **原因：**保险丝损坏。
- **解决方式：**访问 wiki.bambulab.com/zh/smoke-purifier/maintenance/replace-fuse，查看详细的更换步骤。


更换滤芯

①

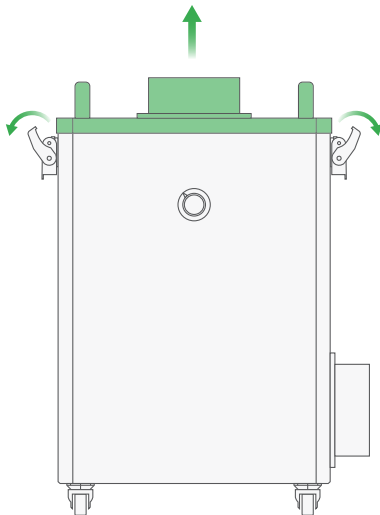

打开两侧锁扣，取下顶盖。

更换滤芯

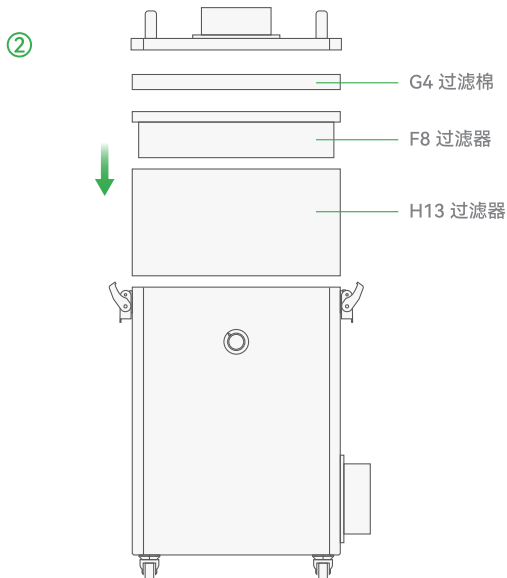


按照图示顺序更换和安装滤芯。

* 请注意，包装内不含备用 F8 过滤器和 H13 过滤器，需要单独购买。

更换滤芯

③

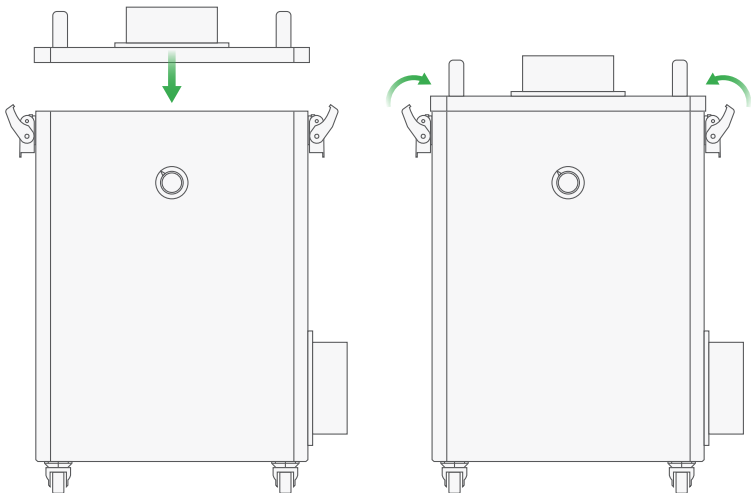

装回顶盖，锁紧两侧锁扣。

产品参数

参数项		参数
机身	框架	冷轧钢板
	排烟管	伸缩 PVC
净化效果	流量	330 m³/h
	最高负压	2800 Pa
	过滤效果	0.3 μm 99.97%
物理大小	外形尺寸（长 * 宽 * 高）	315 * 315 * 500 mm³
	净重	14.13 kg
	法兰接口	φ100 mm
电源要求	输入电压	200 - 240 V, 50 Hz
	最大功率	200 W


技术支持

如果您需要人工服务，请使用以下任一方式与我们联系：

方式 1：通过 Bambu Handy 联系在线技术支持（9:00 - 21:00，法定节假日除外）。



方式 2：在 Bambu Handy 的帮助中心提交工单。

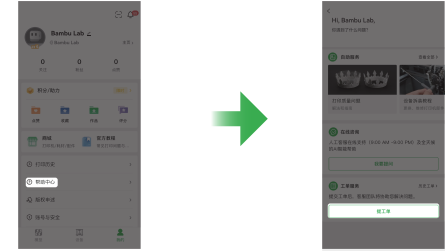

您也可以访问 Bambu Lab 官方 Wiki，查阅更多机器使用和维护教程。

wiki.bambulab.com/zh/home



ご使用前に、大切な確認事項

使用前の確認事項:

- 機器の外装には損傷がないこと
- 電源は外されていること
- フィルタが正しく装着していること
- 上蓋が正しく装着していること

配置場所:

- 空気循環に防がないように、壁から30cm以上に機器を置いてください
- 機器の上に、何も置かないでください

電力供給要件:

- 付属のケーブルのみをご使用ください
- ケーブルをねじる、折ることがないようにしてください
- お手入れの時に、常にケーブルを外してください
- 機器を移動する時に、先にケーブルを外してください


使用時の注意事項:

- 異常な状況（匂い、音など）がありましたら、電源を先に切ってください
- 平坦の平面に置き、機器は傾きがないようにしてください
- この機器は、一酸化炭素や、放射性のある物質を濾過することができません。燃焼による排出物や毒物の濾過には使用できません
- コンロや加熱機付近に使用する場合は、良好な空気循環を保ってください

ご使用の前に、大切な確認事項

- エアインテーク付近に、液体、粉末、可燃物を絶対におかないでください
- フィルタに詰まりが多い場合は、電源を切り、手入れしてください
- いつも純正フィルタをご使用ください。サードパーティ製のフィルタによる不良や故障となる場合、保証が効かなくなる可能性があります


内容物

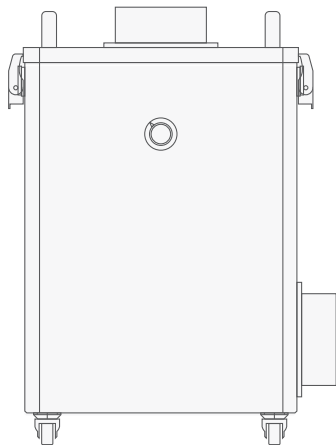

本体



クイックスタート

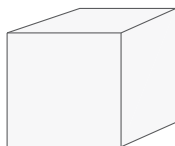


アクセサリボックス



交換用G4フィルタ綿

アクセサリボックスの内容物



排気ホース
直径 100 mm
長さ 2 m




電源ケーブル



ホースクランプ

機器を準備

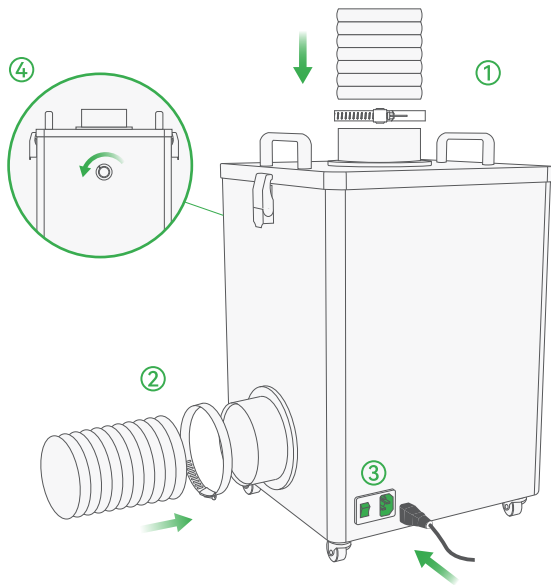

- ① プリンタと清浄機のインテークに排気ホースを装着してください
- ② アウトテークに排気ホースを装着してください
- ③ 電源差込を挿入してください
- ④ バルブ調整ノブを回して、空気流量を調整してください

注意: 調整ダイヤルは風速だけ調整でき、電源を完全に切ることができません。機器後ろの電源スイッチで電源をお切りください。

お困りの時

重要事項: 必ず先に電源ケーブルを外してください!

問題例 1: 空気の排出/吸入が弱い、フィルタ詰まり警告が出ている

- 原因: インテークやホースに防ぎ物があった、フィルタは寿命になった
- 解決策: ホースを外して、インテークとホース内に防ぎ物があるかどうかを確認、フィルタを交換してください

問題例 2: 電源を入れた後すぐに落ちる


- 原因: インテークやホースに防ぎ物があった、フィルタは寿命になったため、起動電流が制限を超えた為
- 解決策: ホースを外して、インテークとホース内に防ぎ物があるかどうかを確認、フィルタを交換してください

問題例 3: 電源LEDが点灯しない

- 原因: フューズが切れた
- 解決策: wiki.bambulab.com/en/smoke-purifier/maintenance/replace-fuse を参照して、フューズを交換してください

フィルタの交換


①

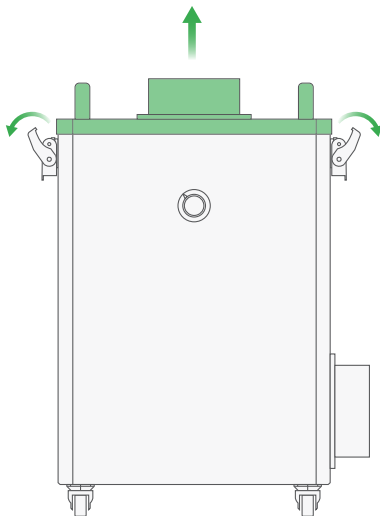

両側のスイッチを押し、上蓋を取り外す

フィルタの交換

②

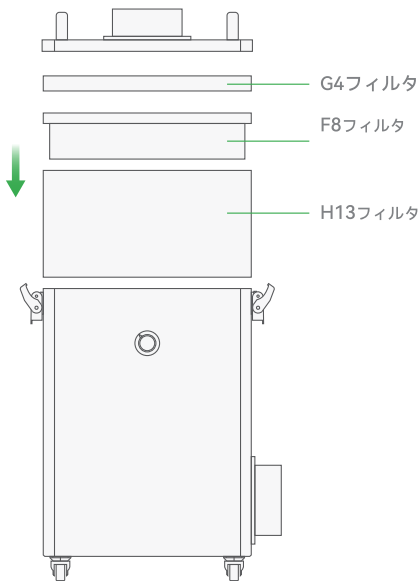


図面のように、各フィルタを交換してください

* F8 と H13フィルタは、交換用の付属品がない為、別途購入が必要です

フィルタの交換

③

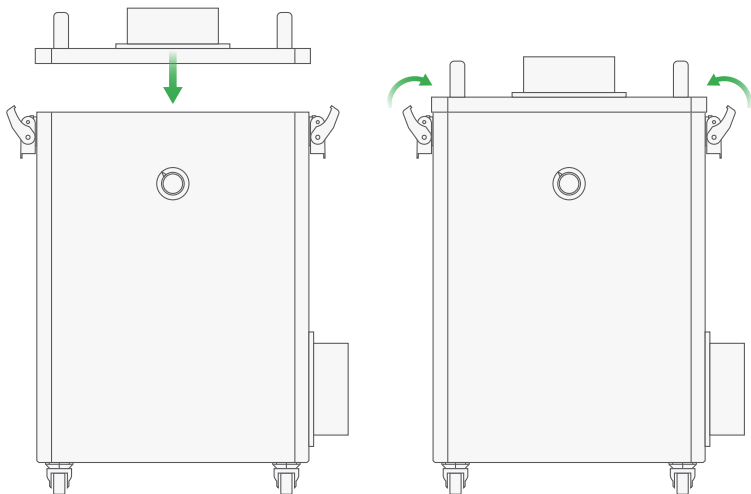

上蓋を取り付けてロックする

技術仕様

項目		仕様
筐体	フレーム	スチール
	ホース	PVC
濾過効率	最大流量	330 m ³ /h
	最大吸入圧	2800 Pa
	基本性能	0.3 μm 99.97%
寸法	本体寸法 (L*W*H)	315 * 315 * 500 mm ³
	重量	14.13 kg
	ホース径	φ100 mm
電気仕様	入力電圧	100 V-120 V~, 50/60 Hz
	最大電力	200 W

技術サポート

サポートが必要な場合、下記の方法をご使用ください

方法 1: Webページからサポートチームに連絡
bambulab.com/support

連絡情報



一般お問合せ



購入前 | 商品仕様 | 注文に関する | 物流問題 | ご意見とご建議



テクニカルサポート

X1シリーズ | P1シリーズ | A1シリーズ | AMS | AMS lite | エラーコード | 手入れ | ソフトウェア | フィラメント

方法 2: Bambu Handyから、サポートチケットを起票する

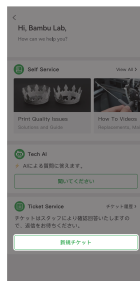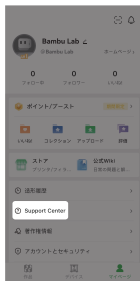

Bambu LabのWikiページにも、弊社機器に関する情報が
満載しておりますので、ぜひご覧ください
wiki.bambulab.com/home



Bambu Lab
Wiki



Bambu Lab

Enjoy!

**祝您使用愉快！
お楽しみください！**

www.bambulab.com